

Bistro Griddle

Instruction manual



Model: DC900-A / DC901-A

Telephone Helpline: 1300225960

Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - Fire Precautions
 - Wiring Regulations
 - Building Regulations
- Some surfaces become hot during operation take care when using the appliance.



- DO NOT immerse the appliance in water.
- DO NOT clean with jet/pressure washers.
- DO NOT carry when hot.
- DO NOT leave the appliance unattended during operation.
- DO NOT obstruct or cover the appliance in any way when in use.
- During and after cooking, the unit is still hot. Never touch the surface to avoid scalding.
- Not suitable for outdoor use.
- Always switch off and disconnect the power supply to the appliance before when not in use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an Apuro agent or a recommended qualified technician in order to avoid a hazard.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Apuro recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.

Product Description

DC900-A - Counter Top Electric Griddle (Cast Iron plate. Cooking Area: 385mm x 280mm) **DC901-A** - Counter Top Electric Griddle (Cast Iron plate. Cooking Area: 380mm x 385mm)

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Apuro product.

Pack Contents

The following is included:

- Apuro Griddle
- Waste trav
- Instruction manual

Apuro prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your Apuro dealer immediately.



Operation



Seasoning the Griddle Plate

Before using for the first time the cooking surface needs to seasoned.

- 1. Ensure the cooking surfaces are clean.
- 2. Brush the surfaces with cooking oil.
- 3. Set the thermostat to 110°C and turn the appliance On. The power indicator light turns on.
- 4. Once the appliance reaches temperature the power indicator light turns off.
- 5. Turn the appliance Off and allow it to cool before wiping away any excess oil.
- 6. The appliance is now ready to use.

Cooking

- 1. Connect the appliance to the mains power supply.
- 2. Set the thermostat to the desired temperature (100°C-300°C). The power indicator light comes on and the appliance begins to heat up.



Note: 200°C to 220°C is suitable for general cooking.

3. The power indicator light turn Off when the appliance has reached the set temperature.



Note: Apuro recommend the cooking surface is lightly oiled before cooking.

4. Place the foodstuffs on the griddle plate and cook as required.

4



Cleaning, Care & Maintenance

If grease is permitted to accumulate, it will begin to carbonise into a hard substance that is extremely difficult to remove. To prevent this, follow the cleaning steps below:

- Always turn OFF the appliance and disconnect from the power supply before cleaning.
- Allow the appliance to cool before cleaning.
- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- Take care when using scrapers to remove cooking residues as they can damage the cooking surface.
- Dry thoroughly after cleaning.
- An Apuro dealer or qualified technician should carry out repairs if required.

Scraping

- After each use, scrape the appliance with a scraper/grill stone/copper brush or flexible spatula to remove excess fat and food. A waste tray is provided for the scrapings if necessary.
- If there is an accumulation of burned fat or food, the cooking surface should be thoroughly scoured and re-seasoned.



Note: It is vital that the cooking surface is re-seasoned after scouring. Warning: Do not use steel wool as it may leave shards that could contaminate food

Waste tray

- This appliance features a waste tray to collect any liquid or fats that run off during cooking.
- · At least once a day, remove and empty the waste tray before washing with warm, soapy water.
- Do not allow the tray to overfill, or excess grease will run out of the overflow hole at the front of the tray.



Warning: Do not remove the tray during or immediately after use as the contents will be hot.

Troubleshooting

Fault	Probable Cause	Solution
Appliance not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Call Apuro agent or qualified Technician
	Power supply	Check power supply
Appliance does not reach set	Faulty thermostat	Call Apuro agent or qualified technician
temperature	Faulty element	Call Apuro agent or qualified technician
Appliance heats up but indicator light does not come on	Indicator light has expired	Call Apuro agent or qualified technician
Power indicator light comes on	Faulty element	Call Apuro agent or qualified technician
but appliance does not heat up	Faulty thermostat	Call Apuro agent or qualified technician
	Thermostat set incorrectly	Check thermostat



Telephone Helpline: 1300225960

Fault	Probable Cause	Solution
Appliance slow to heat up	Cooking surface not clean	Clean cooking surface as instructed
	Faulty element	Call Apuro agent or qualified technician
No power	Thermal cut-out switch is activated	Press re-set switch on rear of unit
Surface flaking	Build up of carbonised food debris	Refer to "Cleaning, Care and Maintenance" section

Technical Specifications

Мо	del	Voltage	Power	Current	Cooking Surface Dimensions W x D (mm)	Dimensions H x W x D mm	Weight
DC90	00-A	220-240V~,	1800W	8A	385 x 280	230 x 440 x 365	16.9kg
DC90	01-A	50Hz	2800W	12.2A	380 x 385	230 x 440 x 460	22.2kg

Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- · Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Apuro parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



Apuro products have been approved to carry the following symbol:

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro.

Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserve the right to change specifications without notice.

6

DECLARATION OF CONFORMITY

• Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità • Declaração de conformidade

Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp • Tipo di apparecchiatura • Tipo de equipo • Tipo de equipamento		Model • Modèle • Modell • Modello • Modelo • Malli	
Bistro Counter Top Electric Griddle - 385x280mm Bistro Counter Top Electric Griddle - 380x385mm		DC900-A DC901-A	
Application of Territory Legislation & Council Directives(s) Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo • Aplicação de directiva(s) de Conselho Electrical safety AS/NZS 60335.1:2011 +A1:2012 +A IEC 60335-2-38:2002 +A1:2008 EN 62233:2008 Electro-Magnetic Compatibility EN 55014-1:2017 EN 55014-1:2017 EN 55014-2:2015 EN 61000-3-2:2014 EN 61000-3-3:2013		A2:2014 +A3:2015 +A4:2017	
Producer Name • Naam fabrikant • Nom o • Nome del produttore • Nombre del fabri	•	rs Apuro	

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).

lk, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus lch, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati. El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Eu, o abaixo-assinado, declaro que o equipamento anteriormente especificado está em conformidade com a(s) anterior(es) Directiva(s) e Norma(s)

Date • Data • Date • Datum • Data • Fecha • Data	21st May 2021	
Signature • Handtekening • Signature	DocuSigned by:	DocuSigned by:
• Unterschrift Firma • Firma • Assinatura	Ashley Hooper B39382C9FD9C478	Josic Holt 3582E210C4054DA
Full Name • Volledige naam • Nom et prénom • Vollständiger Name • Nome completo • Nombre completo • Nome por extenso	Ashley Hooper	Josie Holt
Position • Functie • Fonction • Position • Qualifica • Posición • Função	Technical & Quality Manager	Commercial Manager/ Responsible Supplier
Producer Address • Adres fabrikant •	Fourth Way,	15 Bagdally Road,
Adresse du producteur • Anschrift des	Avonmouth,	Campbelltown
Herstellers • Indirizzo del produttore •	Bristol,	NSW 2560
Dirección del fabricante • Morada do	BS11 8TB	
fabricante	United Kingdom	





DC900-A_DC901-A_A5_v2_20210713