

# apuro

## Pasta Cooker

### Instruction manual



**Model:**  
**CU630-A**

## Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
  - Health and Safety at Work Legislation
  - Fire Precautions
  - IEE Wiring Regulations
  - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT immerse the appliance in water.
- Do not use the appliance for anything other than its intended use.
- Some surfaces become hot during operation - take care when using the appliance.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an Apuro agent or a recommended qualified technician in order to avoid a hazard.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Apuro recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- Ensure water levels are maintained above the minimum indicated level. Failing to do so may result in element failure.
- Switch off power to the appliance, and remove the plug from the power socket while cleaning, draining water, or filling with water.

## Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Apuro product.

Apuro will not accept liability for product failures in the event that:

- The instructions in this manual have not been followed correctly.
- Unqualified or unauthorized personnel have adjusted the pasta cooker.
- Non-original spare parts are used.
- The pasta cooker has not been handled and cleaned correctly.
- The pasta cooker has been used for a purpose for which it was not intended.

## Pack Contents

The following is included:

- Pasta cooker
- Basket (x 4)
- Instruction manual

Apuro prides itself on quality and service, ensuring that at the time of unpacking the contents are supplied fully functional and free of damage.

 
Should you find any damage as a result of transit, please contact your Apuro dealer immediately.

## Installation

- Remove the pasta cooker from the packaging, ensuring that all protective packaging, plastic and residues are thoroughly cleaned from its surfaces.
- Appliances should always be placed on the table when in use.
- Before locating and operating the pasta cooker, it is the user's responsibility to ensure that all Health & Safety regulations concerning safe positioning, spacing, ventilation, electrical installation, and fire risk, are complied with.

### Fitting head unit to the body

- Place the head unit into the right and left support bracket at the rear of the pasta cooker body, then press the spring pin at the right to position the head unit into the pan.

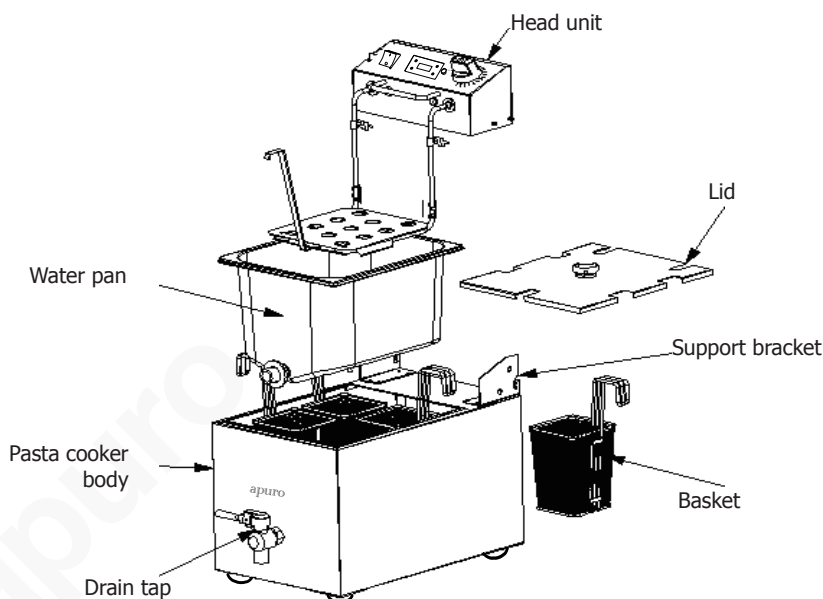

- The pasta cooker can now be filled with water.
- Connect the pasta cooker to the correct power supply and it is ready to operate.

**Caution:** Do not position and operate the pasta cooker near combustible or flammable materials or objects.


## Operation

 1. Set the power switch to "I" position, then turn the thermostat to the required temperature (30°C-110°C). The HEAT indicator light will light up.
2. While heating up, the indicator light will come on; when the required temperature is reached, the indicator light will go out.
3. As the water temperature fluctuates, the thermostat will operate to maintain the set temperature. The indicator light will be lit when the pasta cooker is heating the water.

## Using the timer

The digital timer with audible alarm can be set from 1 second to 15 minutes. The timer provides an audible alarm after the set time expires. It provides no electrical control over the unit.

- **START/STOP:** Press START/STOP to start timer, press again to stop. The timer will provide an audible alarm after the set time. The alarm will beep 10 times and the display will continue to flash until timer is reset (press the START/STOP button).
- **UP:** Press UP to add extra time.
- **DOWN:** Press DOWN to reduce time.
- **PROGRAM:** There are a total of 6 programmable timer settings. The default factory program settings are given below.

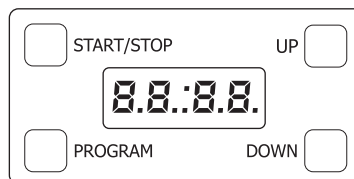

Program	1	2	3	4	5	6
Factory preset time	01:00	02:00	03:00	05:00	10:00	15:00

- To change the length of a program select the program you want to change by scrolling using the PROGRAM button.
- Adjust the program time by using the UP and DOWN buttons. Press START/STOP to commence the count-down. The new program time will be automatically stored.
- If the unit is left without power for more than 24hrs the timer settings will revert to the factory defaults.

## Overheating protection

This appliance is featured with an overheat protection. Should the temperature exceed safe levels the appliance will automatically cut off power. The thermal Cut-out switch is located on the rear of the appliance. To reset the appliance after a sufficient cool-down period:

1. Unscrew the reset switch cover.
2. Press the small reset switch down until it clicks, using a blunt pointed instrument.
3. The appliance is now reset and can be used as normal.

## Cleaning, Care & Maintenance

The pasta cooker should be cleaned after each day's operation; however it may require cleaning more often, depending on the volume use.

1. Switch off the power and disconnect from the power supply by removing the plug from the socket.
  2. The pasta cooker must be left to cool before cleaning.
  3. Empty the water pan by opening the drain tap after use.
- Remove the head unit and element before cleaning takes place.
  - **The head unit cannot be immersed in water, but can be wiped down with a damp cloth.**
  - Warm soapy water is recommended for cleaning. Cleaning agents after prolonged use can cause damage to stainless steel.
  - The main body can also be cleaned with warm soapy water.
  - Baskets and lid are dishwasher safe.

After cleaning as above, please use a dry cloth to clean the appliance to ensure there is no water on the heating element and in the water pan.

## Descaling

For the best water quality, Apuro recommend that a water filter is installed to the mains water supply, particularly in hard water areas. Doing so will reduce the build up of limescale and contaminants in the water tank thus maintaining energy efficiency and prolonging the life of the appliance.

1. Pour a solution of de-scaler and water into the appliance.
2. Follow the manufacturer's instructions on the de-scale solution with reference to the length of time required to soak, agitation, water temperature and on how to dispose of the solution safely.
3. Fill the appliance with clean water and turn back On to flush out the system. Flush out the system thoroughly to remove any de-scaler residue.
4. The appliance is ready for use.

**Note: Use a suitable descaler and always follow the manufacturer's instructions.**

**Apuro recommend that this appliance is descaled every 3 months or more frequently in hard water areas.**

## Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
Appliance not working	The unit is not switched on	Check unit plugged in correctly and switched on
	Plug or lead is damaged	Consult a qualified technician
	Mains power supply fault	Check mains power supply
Appliance does not reach set temperature	Faulty thermostat	Consult a qualified technician
	Faulty element	Consult a qualified technician
Appliance heats up but indicator light not ON	Indicator light has expired	Consult a qualified technician
HEAT indicator light comes on but appliance does not heat up	Faulty element	Clean cooking surface as instructed
	Faulty thermostat	Consult a qualified technician
	Thermostat set incorrectly	Check thermostat
No power	Thermal cut-out switch is activated	Check the appliance is safe with no obvious damage then press the reset switch on the rear

## Technical Specifications

Note: Due to our continuous improvement process, the product specifications are subject to change without notice.

Model	Voltage	Power	Current	Dimensions H x W x D mm	Weight
CU630-A	220-240V~, 50/60Hz	2900W	12.6A	415 x 280 x 450	9.6kg

## Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

## Compliance

The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Apuro parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



Apuro products have been approved to carry the following symbol:

**All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro.**  
**Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserve the right to change specifications without notice.**

# DECLARATION OF CONFORMITY

• Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •  
• Declaración de conformidad • Declaração de conformidade

Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp • Tipo di apparecchiatura • Tipo de equipo		Model • Modèle • Modell • Modello • Modelo
8L Pasta cooker		CU630 -A
Application of Territory Legislation & Council Directives(s) Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo	Electrical Safety IEC 60335-1:2010 +A1:2013 +A2:2016 IEC 60335-2-47:2002 +A1:2008 +A2:2017  Electro-Magnetic Compatibility (EMC) EN IEC 55014-1: 2021 EN IEC 55014-2: 2021 EN IEC 61000-3-2: 2019+A1: 2021 EN 61000-3-3: 2013+A1: 2019+A2: 2021	
Manufacturer Name • Naam fabrikant • Nom du fabricant • Name des Herstellers • Nome del fabbricante • Nombre del fabricante		Apuro

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus

Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

 
 
Date • Data • Date • Datum • Data  
• Fecha

Signature • Handtekening • Signature  
• Unterschrift Firma • Firma

Full Name • Volledige naam • Nom et prénom  
• Vollständiger Name • Nome completo • Nombre completo

Position • Functie • Fonction • Position  
• Qualifica • Posición

Manufacturer Address • Adres fabrikant • Adresse du fabricant • Adresse des Herstellers • Indirizzo del fabbricante • Dirección del fabricante

14 <sup>th</sup> Jun 2024	
DocuSigned by:  B39382C9FD9C478... ASHLEY HOOPER	DocuSigned by:  386FAD00DFE8483... BRENDAN DENTREQUE
Group Head of Product Quality & Compliance	Commercial Manager/ Responsible Supplier
Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom	15 Badgally Road, Campbelltown NSW 2560











**apuro**

CU630-A\_ML\_A5\_v1\_2024/11/06