



PRODUCT DOCUMENT PACK

Prepared and distributed by KW Commercial Kitchen

PRODUCT

Benchstar CS-MFS7B Commercial Milk Frother & Steamer – 7L Boiler

Model / SKU: CS-MFS7B

KW COMMERCIAL KITCHEN

7/72 Canterbury Road, Bankstown NSW 2200

Phone 1300 001 366

Email sales@kwcommercial.com.au

Web www.kwcommercial.com.au



Scan for the current KW product page

DOCUMENT NOTICE

The supplier document begins on the next page. KW contact branding is added in a separate footer area and does not replace the supplier's instructions, specifications or warranty terms.

Official supplier source: <https://www.foodequipment.com.au/amfile/file/download/file/4235/product/9284/>

Steam Water Boiler Machine

Instruction Manual



Strictly prohibit the operation of non-professional

content

1.Operator interface	2
2.Instructions	2
3.Steam boiler main parts name.....	6
4.Specification.....	6
5.Packing list.....	6
6.Matters needing attention.....	7
7.cleaning and maintenance process.....	7
8.After-sales service description and guarantee	8
Attached, product certificate	


----- Please cut off along the dotted-line -----

Product Certificate

Produce Certification	By checking, the examination of the product comply with the technical standards and is approved for release.
	Bar code pasting product inspection

1.Operator interface

The operation area is divided into a water boiler operation area and a steam engine operation area

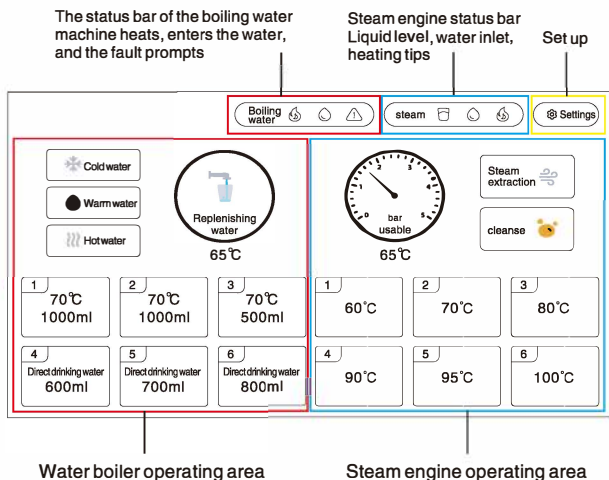

2.Instructions

After the machine is powered on, turn on the machine switch and enter the running state.

The machine operation interface is divided into the water boiler operation area and the steam engine operation area, which are operated independently.

Water boiler operation area:

Press the cold water: long press the cold water, release to stop the water,

Press warm water: long press to remove warm water, release to stop water,

Press hot water: Press and hold to remove hot water, release to stop the water.

The right side shows the water volume status and the real-time tank water temperature.

The water outlet button 1–3 is the constant temperature quantitative key, and the button 4–6 is the direct drinking water quantitative key, which can be set according to the demand.

Steam engine operation area:

Press the outlet: Press and hold the outlet to vent the steam, release and stop the outlet.

Press Clean: The machine starts self-cleaning maintenance, press any button to stop cleaning.


The pressure and probe temperature are shown on the left.

The steam button 1–6 is a constant temperature key, which can be set according to demand.

2.1 After the machine is powered on, it will directly enter the running state;

The machine has 4 settings interfaces:

Water heater furnace temperature setting, effluent calibration, quantitative setting, and about the machine.

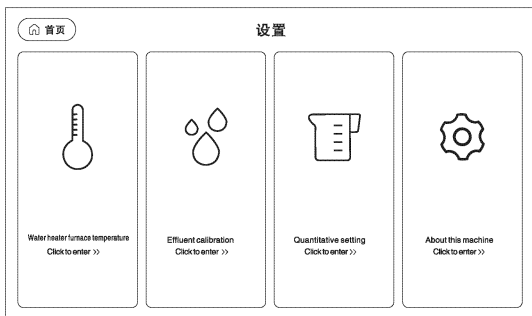

Settings interface

On the main screen:

Press the Settings button: Enter the settings interface

This page is divided into: Water Heater Furnace Temperature Setting, Outlet Water Calibration, Quantitative Setting, About the Machine

2.2 Hot water heater furnace temperature setting

Click to enter the water heater furnace temperature setting interface: it can be adjusted by sliding or clicking the "+/-" button, After setting the furnace temperature of the hot water machine, click Save button to save it.

2.3 Effluent Calibration



Place the measuring cup under the water outlet before calibration

Click to enter the outlet calibration interface: click "Cold Water Calibration", click the "Calibration" button after the first step, enter the actual water output in the box, then click the "Calibrate" button after the second step to enter the actual output water volume and finally click Save.


Click to enter the effluent calibration interface: click "Hot Water Calibration", click the "Calibration" button after the first step, enter the actual water output in the box, then click the "Calibrate" button after the second step to enter the actual output water volume and finally click Save.

2.4 Quantitative Setting

Click to enter the quantitative setting interface: click "water boiler", select gear 1, and adjust the gear on the right temperature and water, adjust the completion of the save button to save. The adjustment method of gears 2–3 is the same (Figure 3). Select gear 4, adjust the amount of water in gear 4 on the right, and press the save button to save after adjustment. Gear position 5–6 Adjustment method is the same (Figure 4).

Click to enter the quantitative setting interface: click "steam engine", select gear 1, and adjust gear 1 on the right Adjust the temperature and compensation temperature, press the save key to save. The adjustment method for gears 2–6 is the same (Figure 5).

Water boiler quantitative setting – hot water setting




By moving the slider to the left and right and the "+/-" button, the hot water temperature can be adjusted for the 1–3 gears of the water machine



(Figure 3)

Press and hold the "◀▶" button to slide left and right to adjust the water flow of the machine 1–3 gears.

Water boiler quantitative setting – direct drinking water setting




Water boiler 4–6 for direct drinking water, can not adjust the temperature.



(Figure 4)

Press and hold the "◀▶" button to slide left and right to adjust the water level of the water machine 4–6 gears.

Quantitative setting of steam engine



Steam engine gears 1–6 can be advanced by pressing the "+/-" button on the left and right of the slider Line temperature adjustment.




(Figure 5)

The "+/-" button can be used to adjust the temperature of steam engine 1–6.

2.5 About this Machine

The screen about the device includes: device duration, current version number, contact phone number, and company website.

3.Steam boiler main parts name

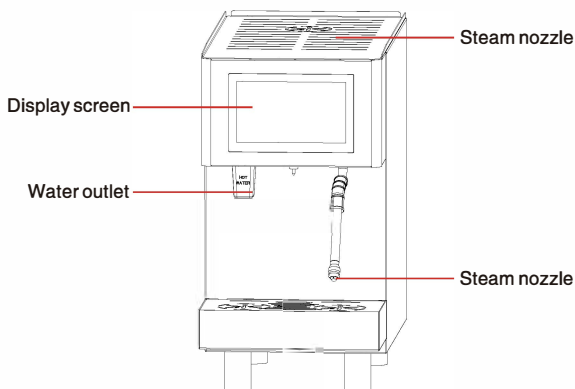

Steamnozzle and water outlet and part of the fuselage high temperature, careful burns!

4.Specification

Model	Size	N.W.	Power	Voltage
CS-MFS7B	258*548*498mm	21kg	3500W	240V

5.Packing list

1	Host machine	1	2	Water box	1
3	specification	1	4	2 meters three-part tube	1
5	Drain pipe	1	6	Inlet plug	1
7	Ball valve	1			


6. Matters needing attention

Please read this manual carefully before use

1. The rated power of the equipment is 3500W, requiring 16A large hole for the equipment;
2. Ensure that the water inlet pipe is firmly installed to avoid water leakage;
3. The hose assembly that comes with the equipment should be used during installation, and the old hose assembly cannot be reused;
4. The inlet water pressure ranges from 200 Kpa–600 kpa
5. Do not use electrical appliances in wet environments or around water;
6. Do not pull the power cord when using;
7. Do not place flammable and explosive materials around electrical appliances;
8. Do not disassemble or repair the equipment while it is running;
9. Please do not disassemble the equipment to avoid the risk of electric shock;
10. When the equipment is running at high temperature, please pay attention to burns;
11. Please ensure that the equipment maintenance is carried out when the power is off and the equipment is cooled;
12. When cleaning the equipment, please wipe with a wet towel in the case of power failure, do not rinse with running water!
13. This instruction manual is physically, sensorially or intellectually deficient, or lacking in experience or knowledge Not applicable to people (including children)

7. Steam water boiler cleaning and maintenance process

1. In the steam state, click "cleaning" on the home page for pressure relief. Pressure relief every day before closing time.
2. After pressure relief is complete, unscrew the drainage valve at the bottom to drain water and close the drainage valve.
3. Prepare a 7L container, adjust the ratio of citric acid detergent to warm water by 1:20, and enter the water pipe Remove the inlet end and place it at the bottom of the container. 【 Once in February–March 】
4. After starting up and running for half an hour, discharge the pressure according to steps 1 and 2.
5. Install the water inlet end back to the water inlet, start the operation, after heating is completed, follow steps 1 and 2 to relieve pressure and discharge, and can be used normally after descaling is completed.

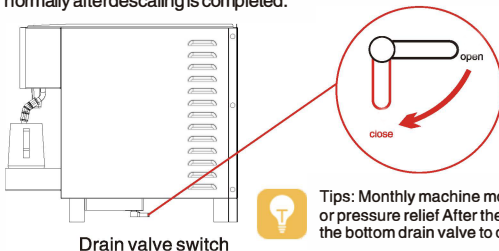

Drain valve switch



Tips: Monthly machine morning cold machine or pressure relief After the machine unscrew the bottom drain valve to drain once.

8. After-sales service description and guarantee

1. This warranty card is only applicable to the after-sales service of the products manufactured by the sealing machine company.
2. When purchasing the machine, please fill in the product and user information carefully according to the content, and be sure to ask for the purchase voucher.
3. Imitation products or the use of imitation parts, the quality failure occurred, will not be repaired.
4. Although during the warranty period, if the following conditions, will not be free maintenance.
 1. Failure to produce the purchase certificate and product warranty card, or produce inconsistent or altered information;
 2. Failure and damage caused by improper use without following the instructions;
 3. Failure caused by unauthorized repair or transformation;
 4. Damage caused by irresistible factors such as natural disasters and earthquakes.



Federal Hospitality Equipment Pty Ltd

Australia

ABN 84 169 357 448
3B, 400 Moorebank Ave, Moorebank NSW 2170 Australia
P: 1300 887 055
F: +61 2 9771 3061
www.foodequipment.com.au



New Zealand

NZBN: 942 903 654 5568
146 Neilson Street Onehunga 1643, Auckland, New Zealand
P: 09 415 6470
F: 09 415 6471
www.fedproducts.co.nz

