



PRODUCT DOCUMENT PACK

Prepared and distributed by KW Commercial Kitchen

PRODUCT

Fagor Kore 700 Series Electric 4 Burners with oven C-E741

Model / SKU: C-E741

KW COMMERCIAL KITCHEN

7/72 Canterbury Road, Bankstown NSW 2200

Phone 1300 001 366

Email sales@kwcommercial.com.au

Web www.kwcommercial.com.au



Scan for the current KW product page

DOCUMENT NOTICE

The supplier document begins on the next page. KW contact branding is added in a separate footer area and does not replace the supplier's instructions, specifications or warranty terms.

Official supplier source: <https://www.foodequipment.com.au/amfile/file/download/file/624/product/6125/>

GAMA 700 GENERACIÓN KORE / 700 SERIES KORE GENERATION
ELÉCTRICAS CON HORNO / ELECTRIC RANGES WITH OVEN



C-E741
C-E741Q
C-E761

FECHA DE CREACIÓN. 31 de marzo de 2020
CREATION DATE. March 31, 2020

rev 032022



ÍNDICE / INDEX

#	DESCRIPCIÓN / DESCRIPTION	PAG.
A	MUEBLE / UNIT	1
B	CONJ. FUNCIONAL / FUNCTIONAL ASSEMBLY	3
C	HORNO / OVEN /	5
	REPUESTOS RECOMENDADOS / RECOMMENDED SPARE PARTS	7
	ESQUEMA ELÉCTRICO / WIRING DIAGRAM	8


MENSAJE DE ADVERTENCIA / WARNING MESSAGE

Los dibujos representados en este documento son orientativos y pueden no reproducir con exactitud las piezas en cuestión. Los aparatos están sujetos a modificaciones sin previo aviso. Asegúrese de consultar la última versión del despiece técnico y de pedir las piezas compatibles con su modelo según la fecha de fabricación.


IMPORTANTE. Repuestos recomendados marcados en color amarillo en las listas de repuestos que acompañan a cada una de las láminas.

The drawings shown in this document are for guidance and might not represent the parts accurately. The machinery is subject to change without prior notice. Please, ensure that this is the most recent revision of the spare parts manual, and that you are ordering suitable parts for your model considering its date of manufacture.


NOTE: The recommended spare parts are marked in yellow on the spare parts lists that come along with each drawing.

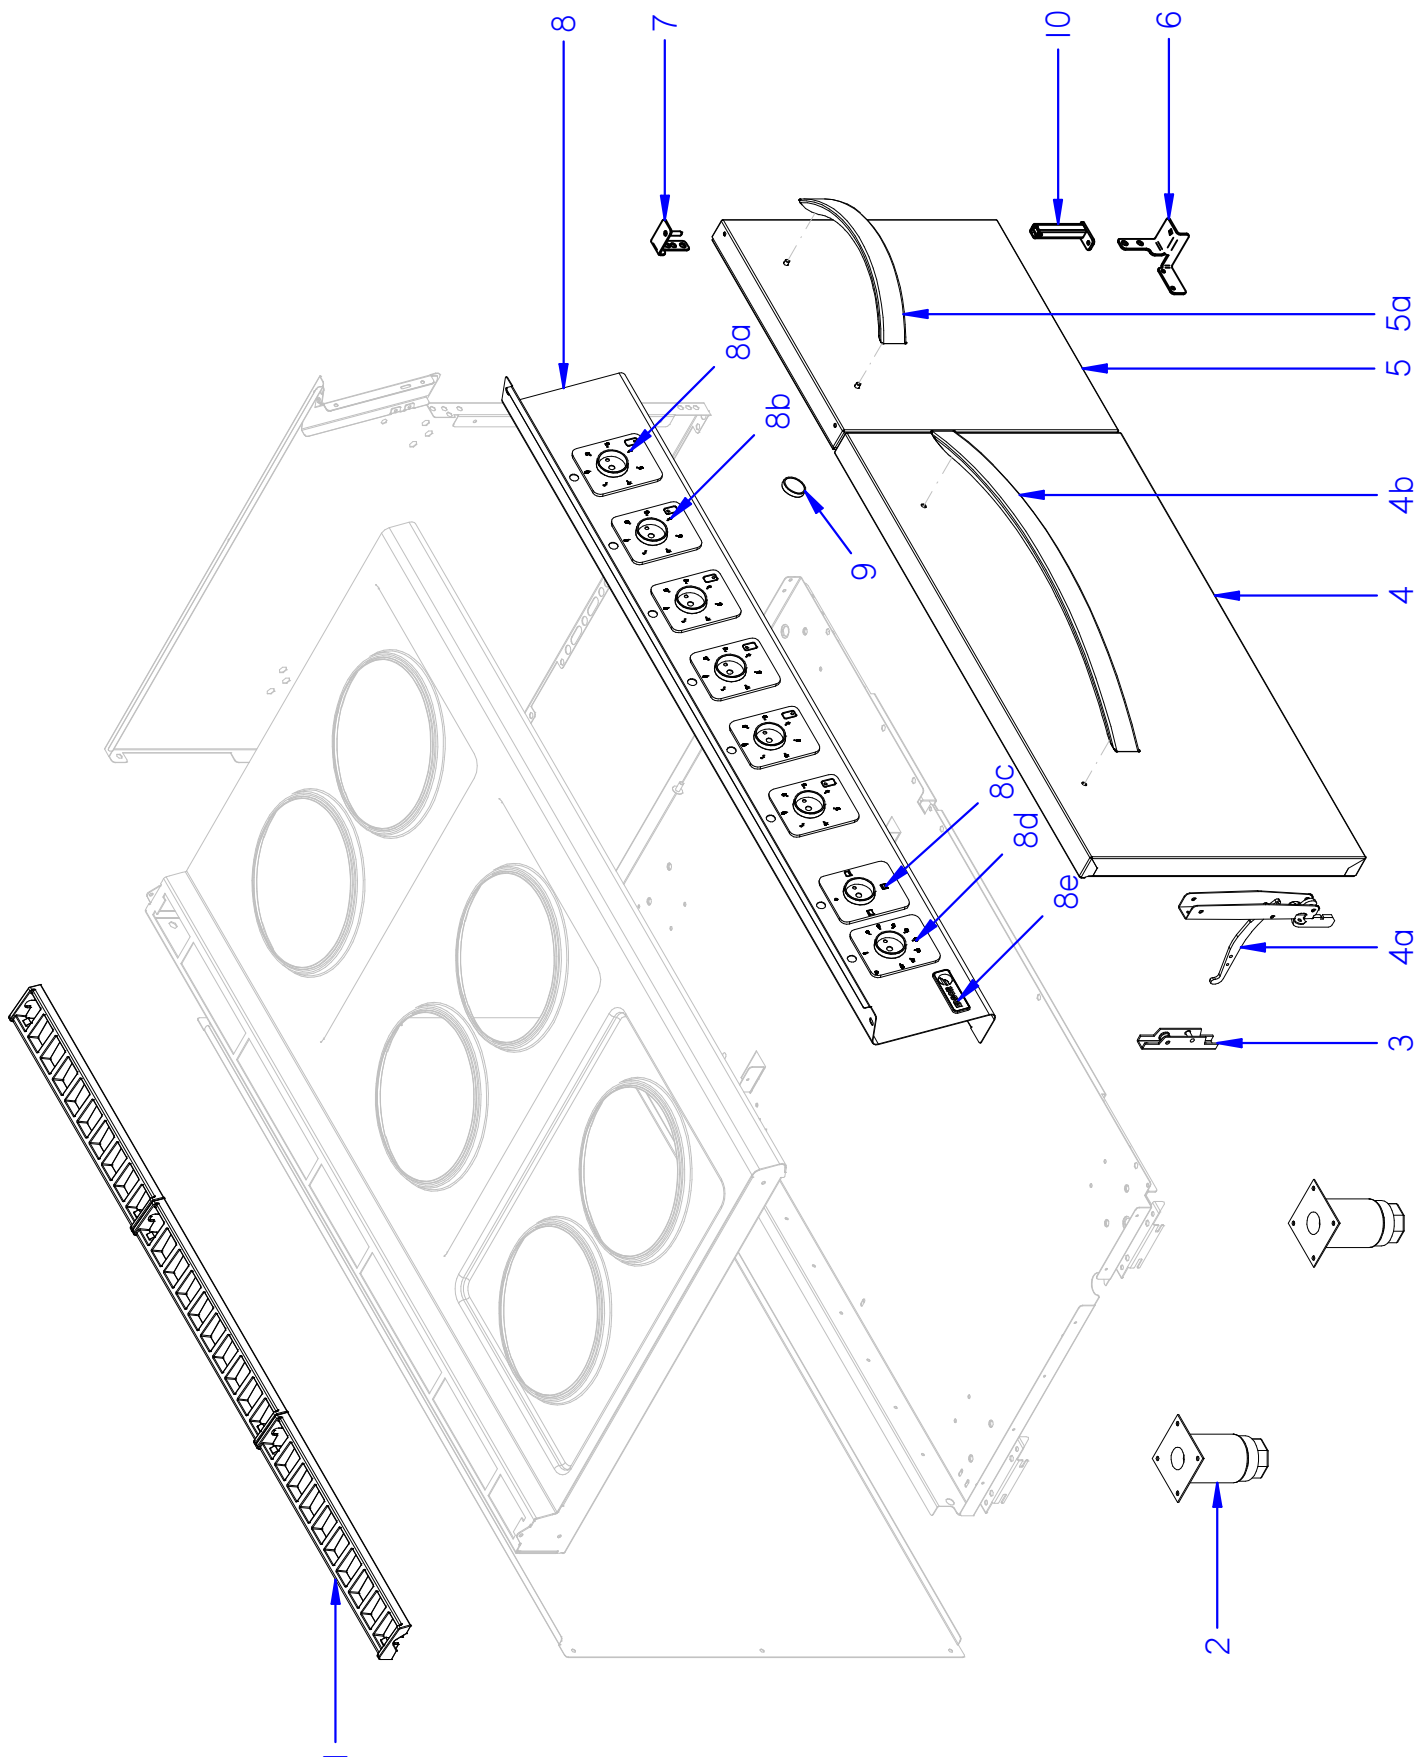





[illegible]

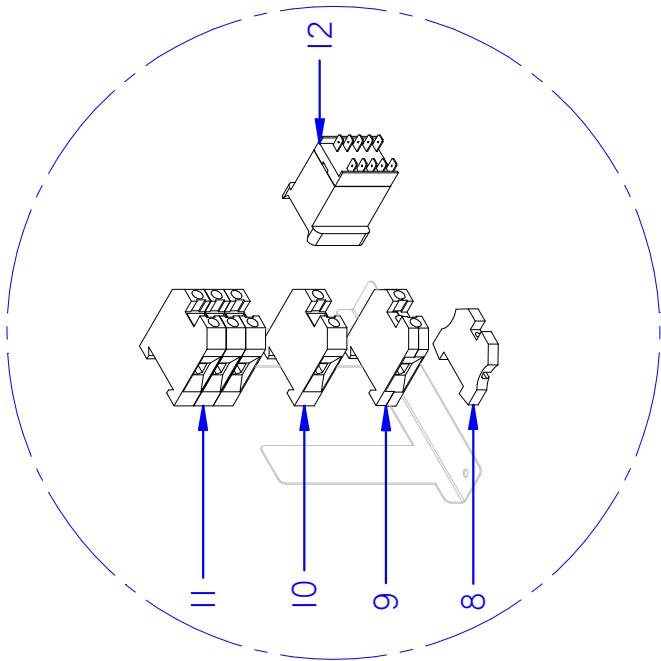

DETALLE A

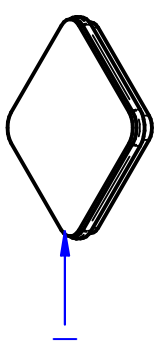

MODELOS Q / Q MODELS

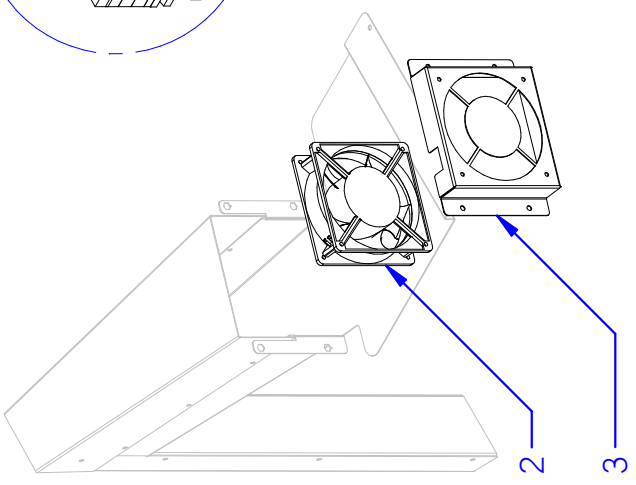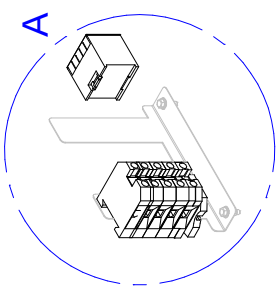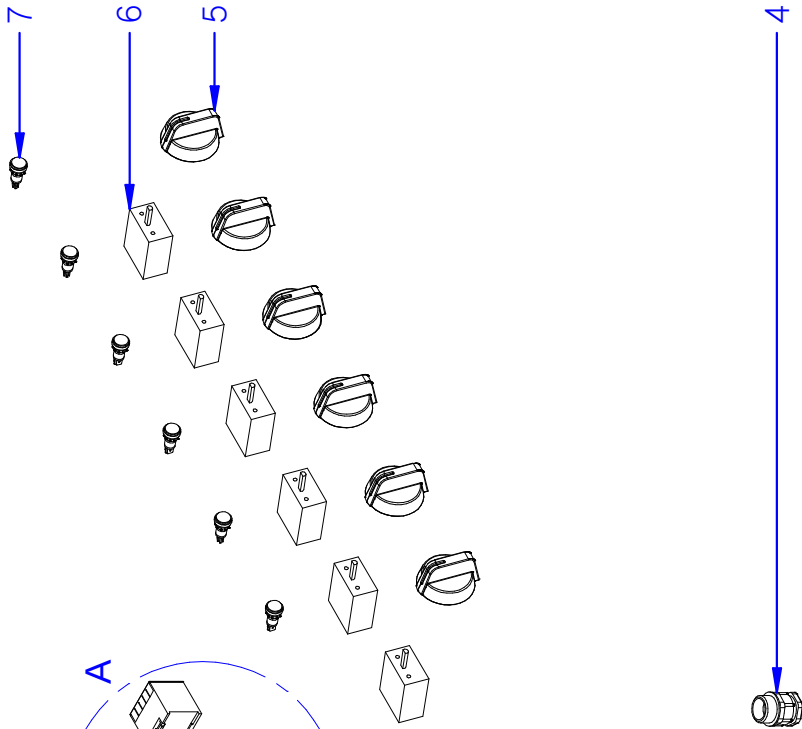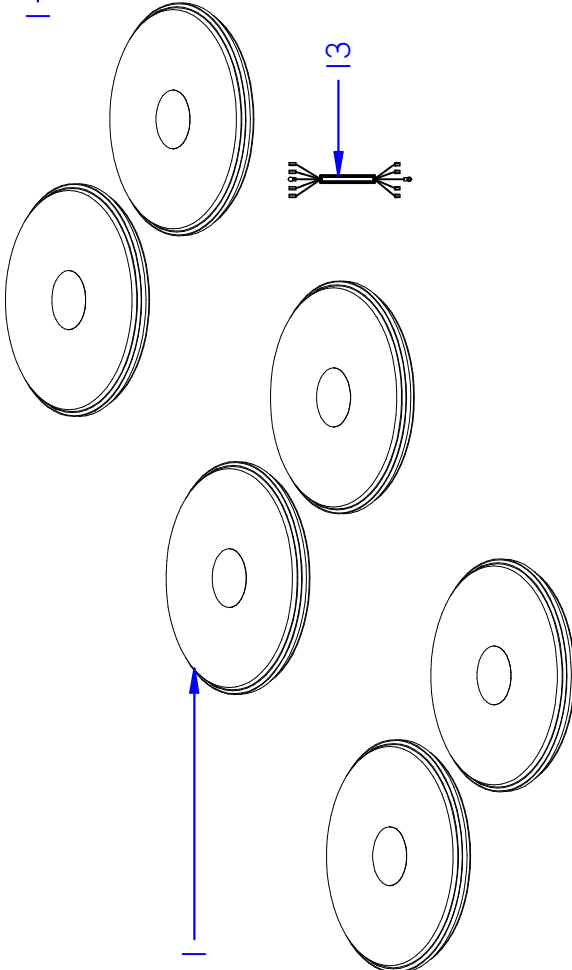

[illegible]





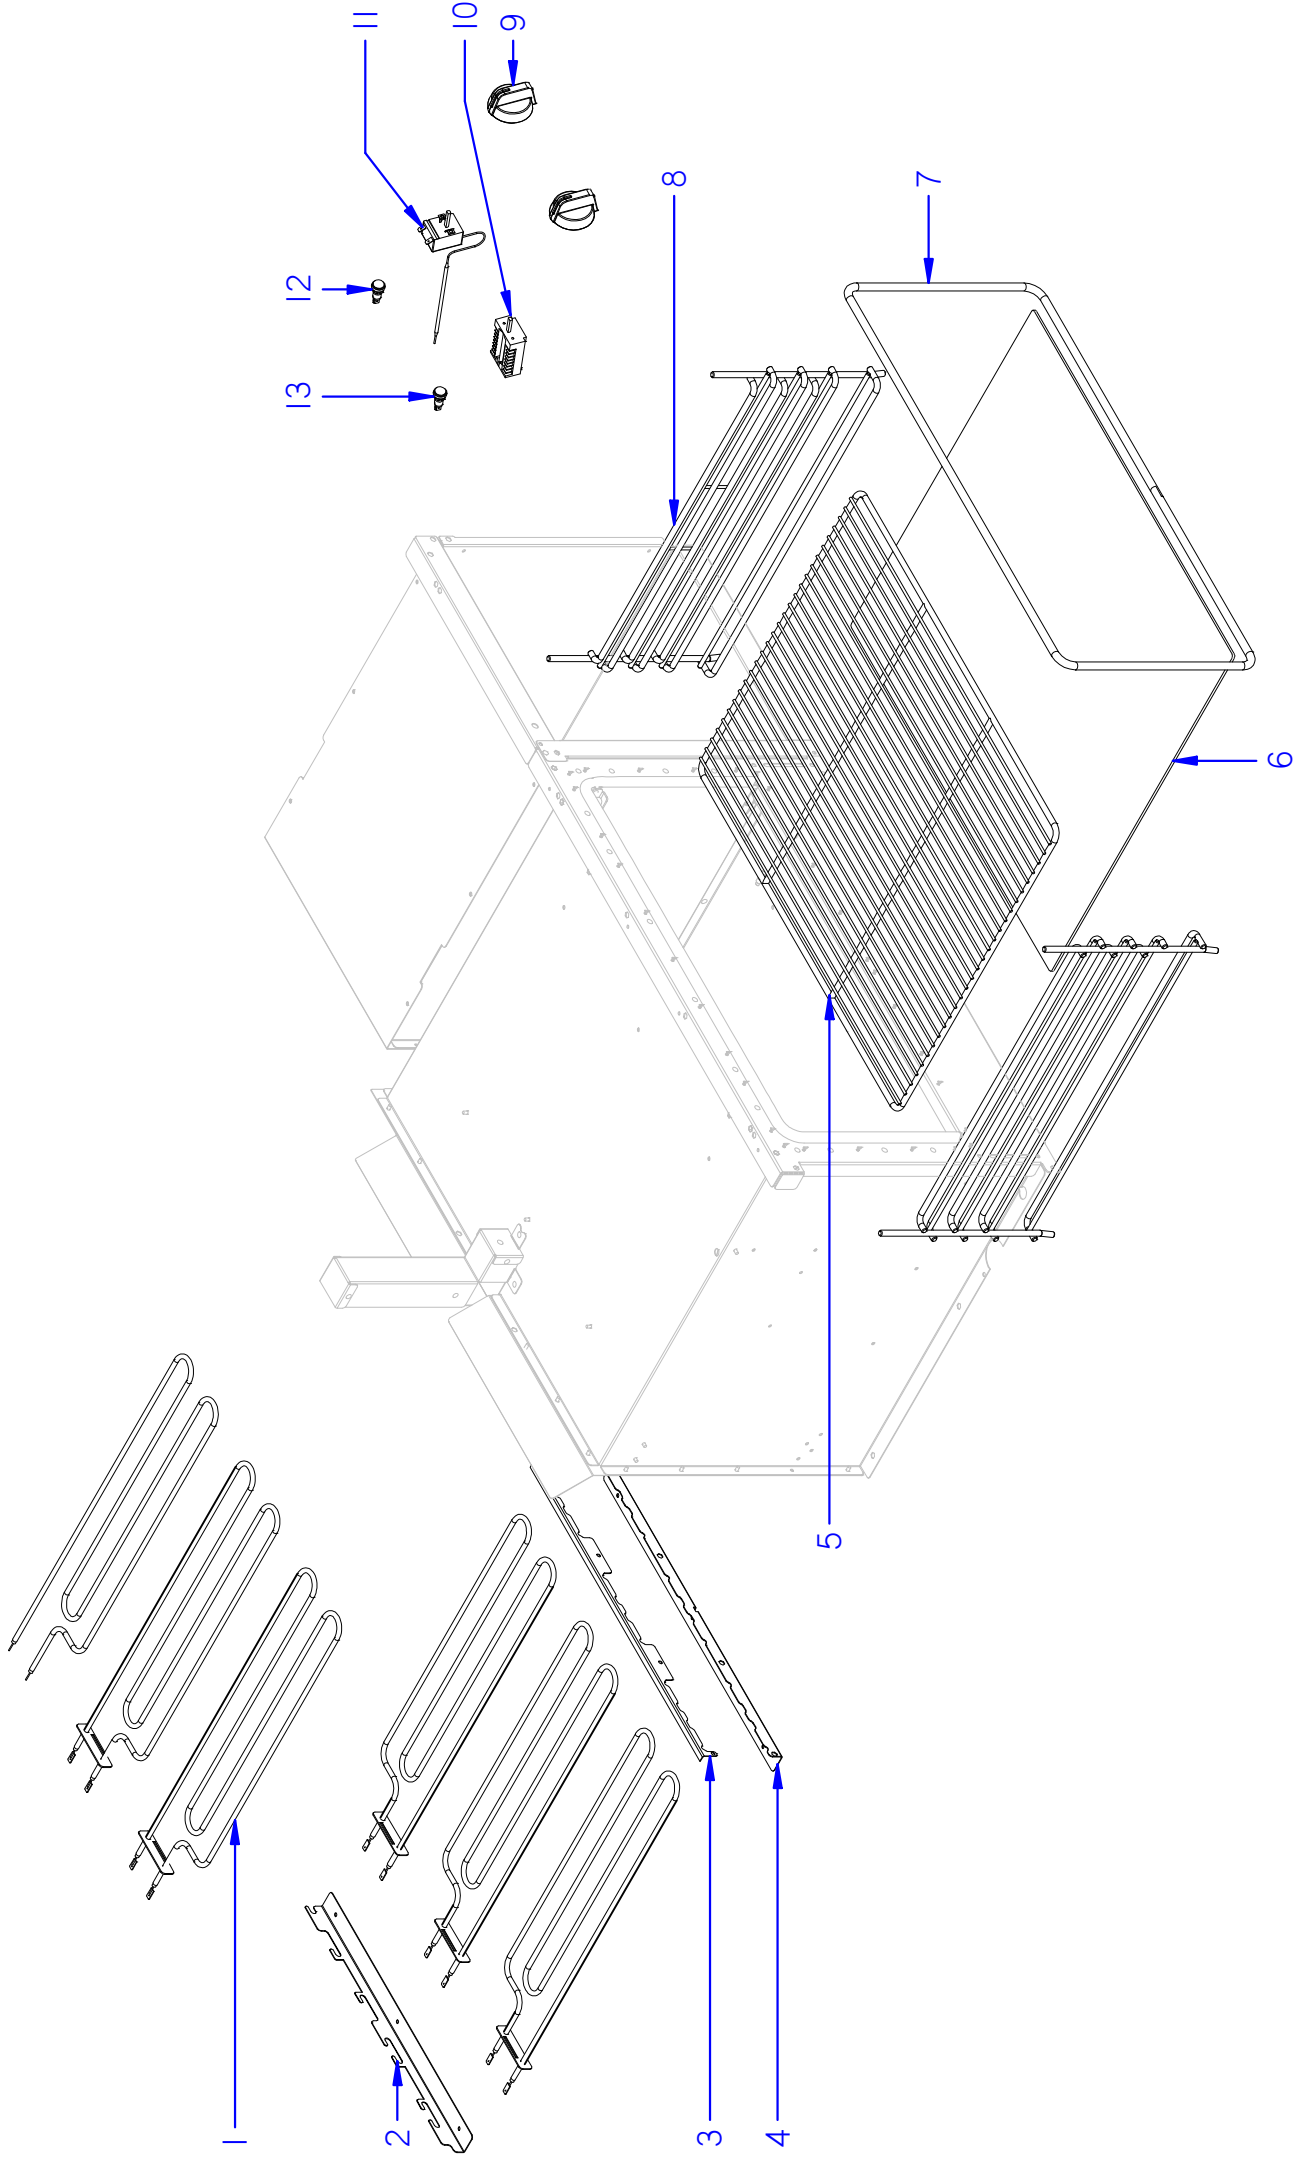


LÁMINA C / C DRAWING / PLAN C

[illegible]

[illegible]

C-E741

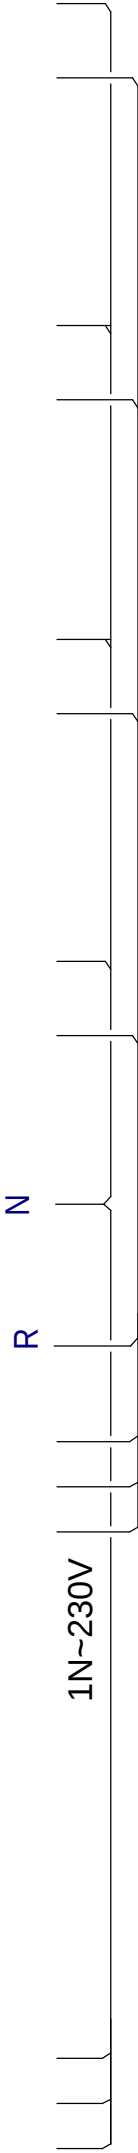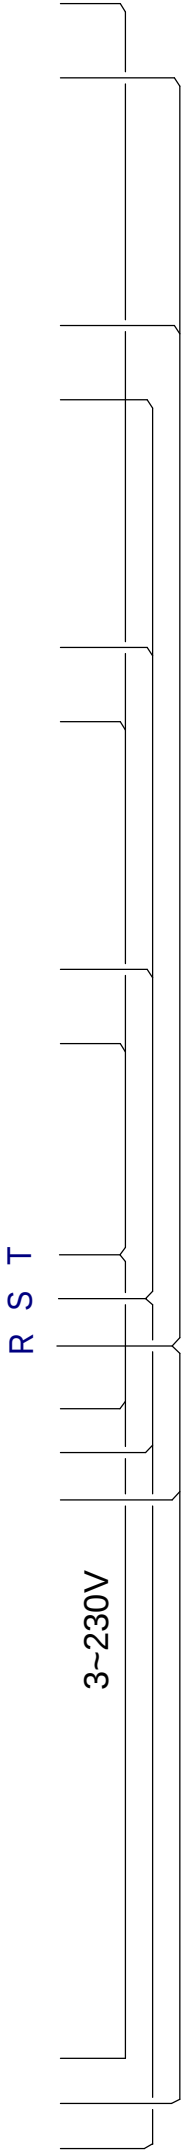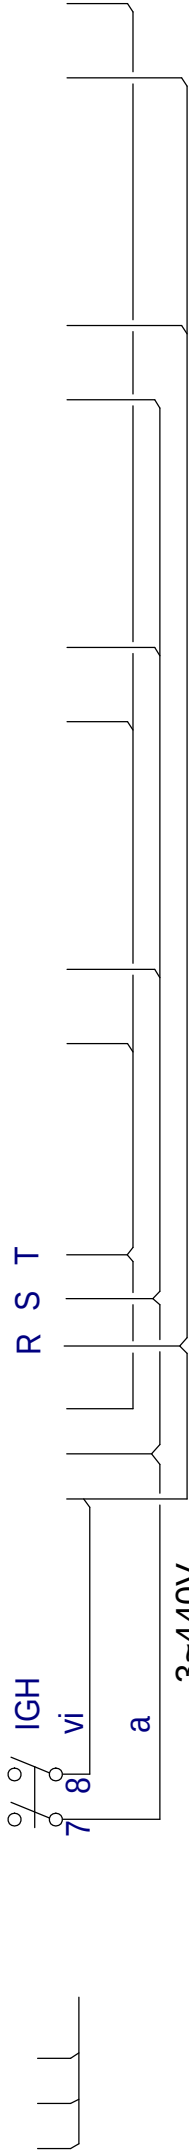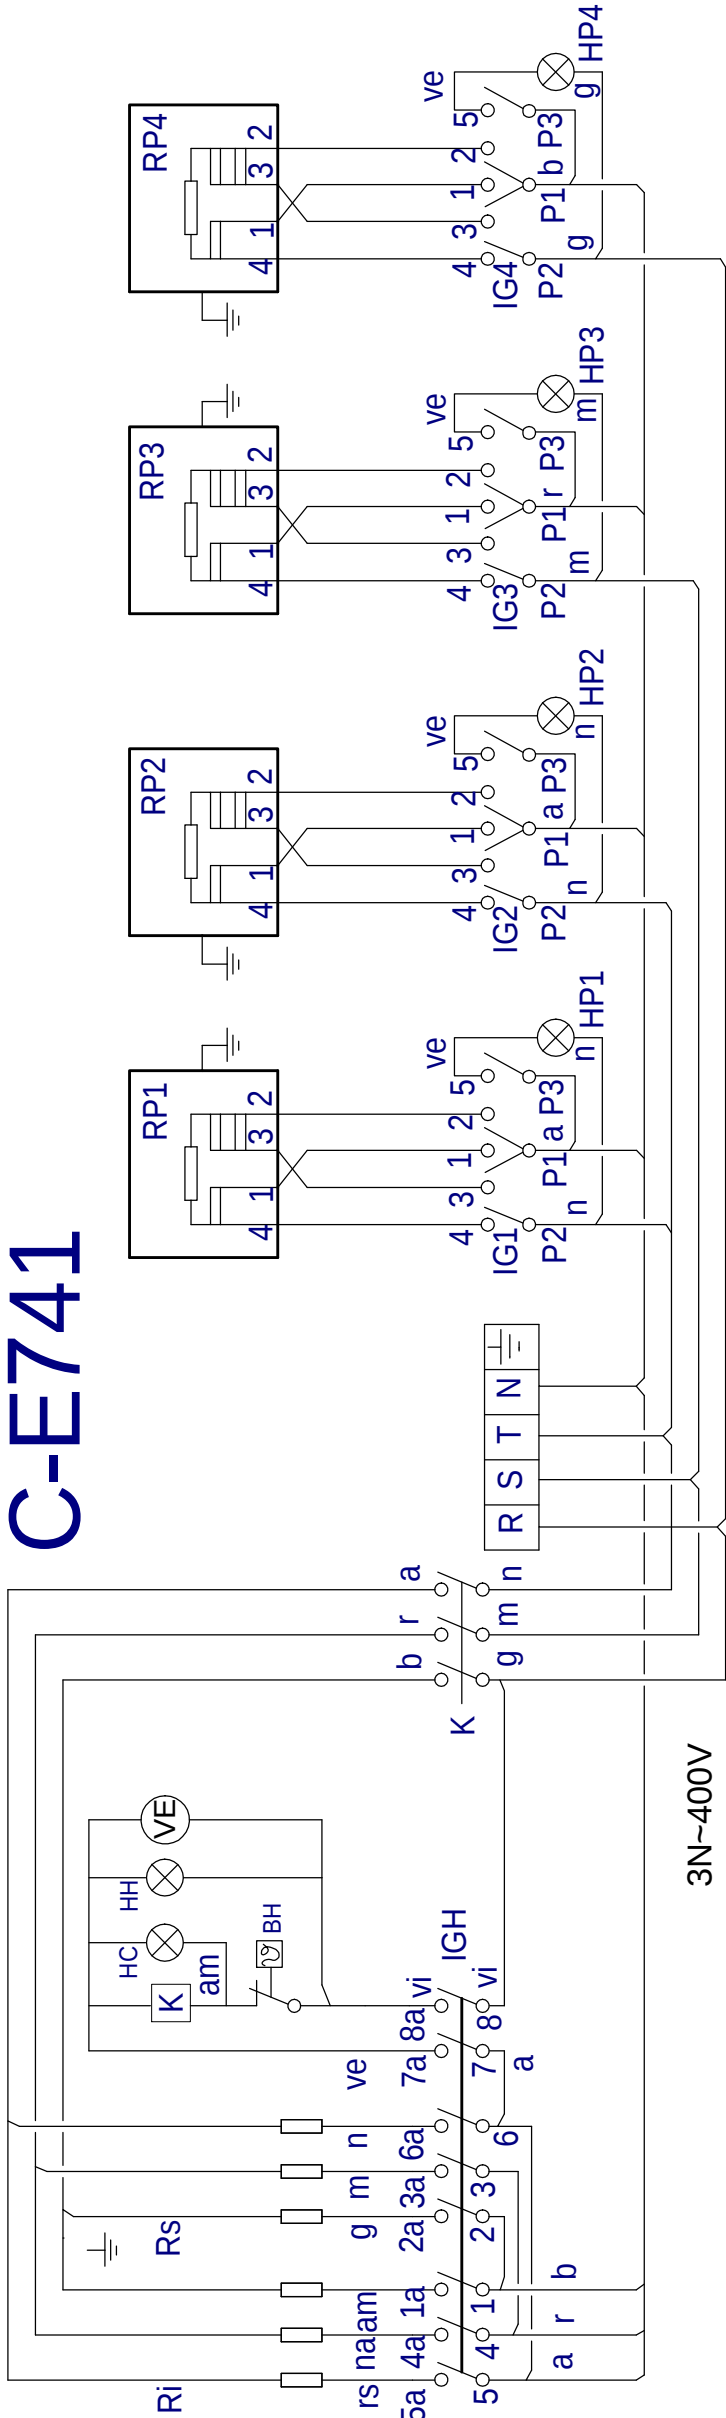

HPx :Lampara Calentamiento Placas / Heating lamp (electrical plates)

IGx :Conmutadores de placas electricas / Main switch (electrical plates)

IGH :Conmutador General Horno / Oven main switch

HH : Lampara Horno Encendido / Main lamp (oven)

HC : Lampara Calentamiento Horno / Heating lamp (oven)

Ri : Resistencia Horno Inferior / Lower resistance (oven)

Rs : Resistencia Horno Superior / Top resistance (oven)

RPx :Placas electricas / Electrical plates

BH : Termostato de Horno / Thermostat (oven)

TFR: Transformador / Transformer

K: Contactor / Contactor

VE: Ventilador / Fan

r = rojo-red-rouge

m = marron-brown-marron

g = gris-grey-gris

n = negro-black-noir

a = azul-blue-bleu

b = blanco-white-blanc

vi = violeta-violette-violet



am = amarillo-yellow-jaune

na = naranja-orange-orange

rs = rosa-rose-pink

ve = verde-green-vert


am/ve = amarillo/verde-
yellow/green-jaune/vert

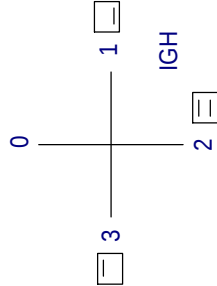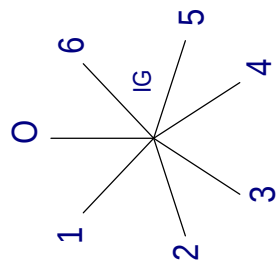


IG POS.	P1		P2		P3	
	1	2	3	4	5	6
0						
1	X			X		X
2				X	X	X
3			X		X	X
4		X			X	X
5		X	X	X	X	X
6	X	X	X	X	X	X

IGH POS.	1_1a		2_2a		3_3a		4_4a		5_5a		6_6a		7_7a		8_8a	
	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
0																
1	X								X						X	X
2	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
3		X	X	X										X	X	X

12002181

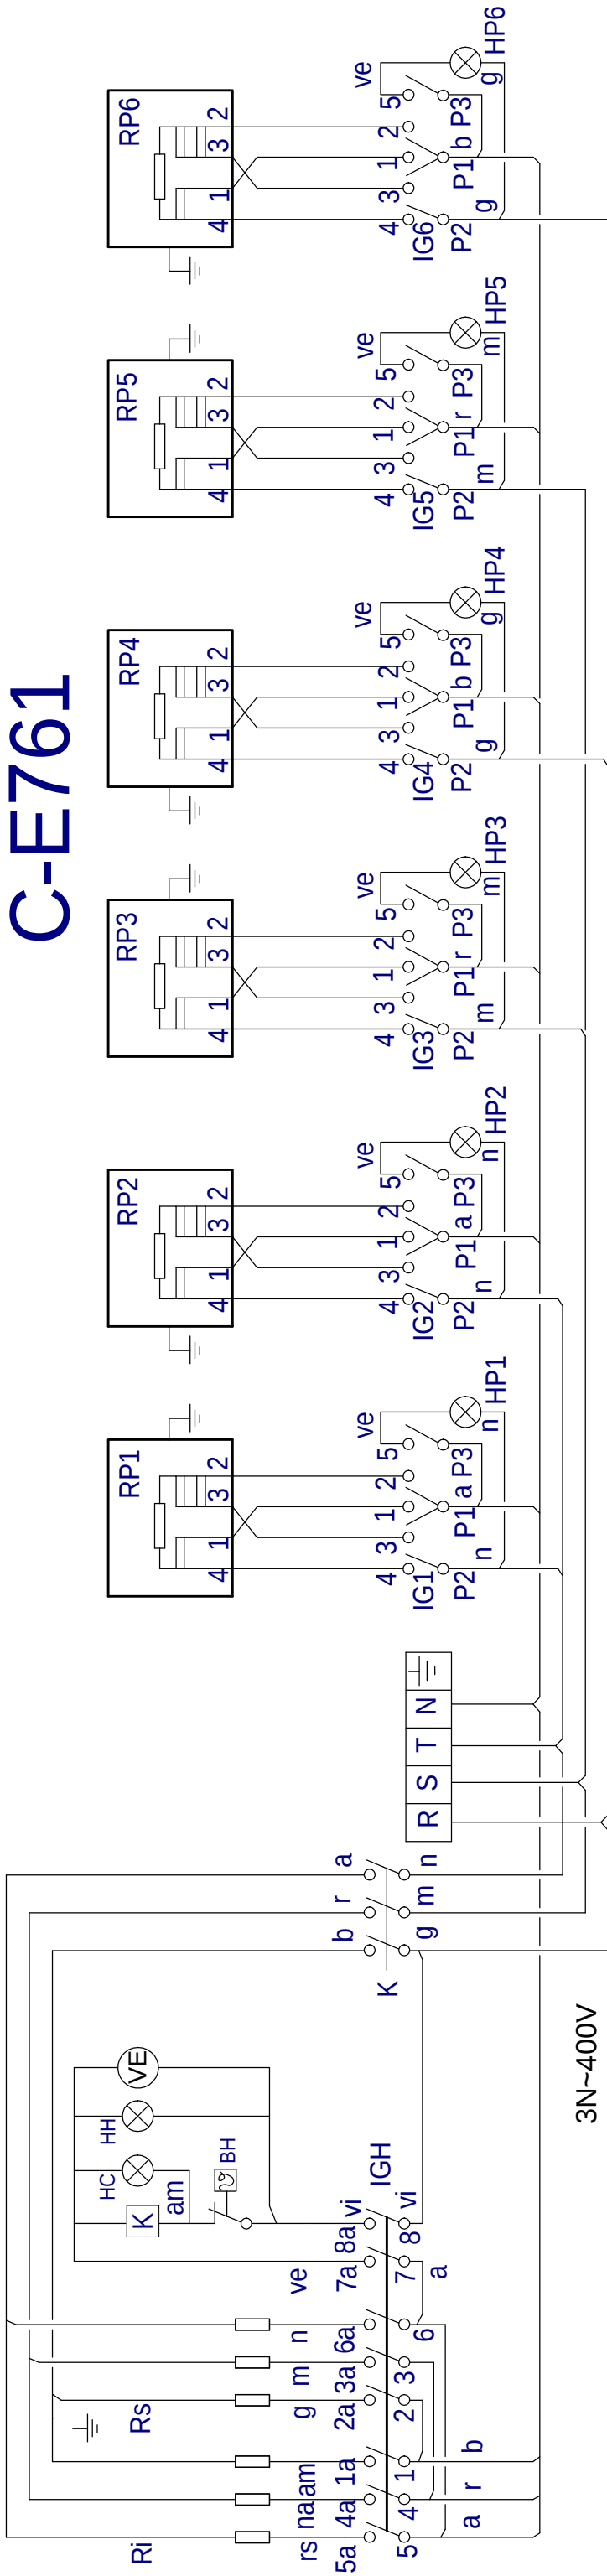

C-E761

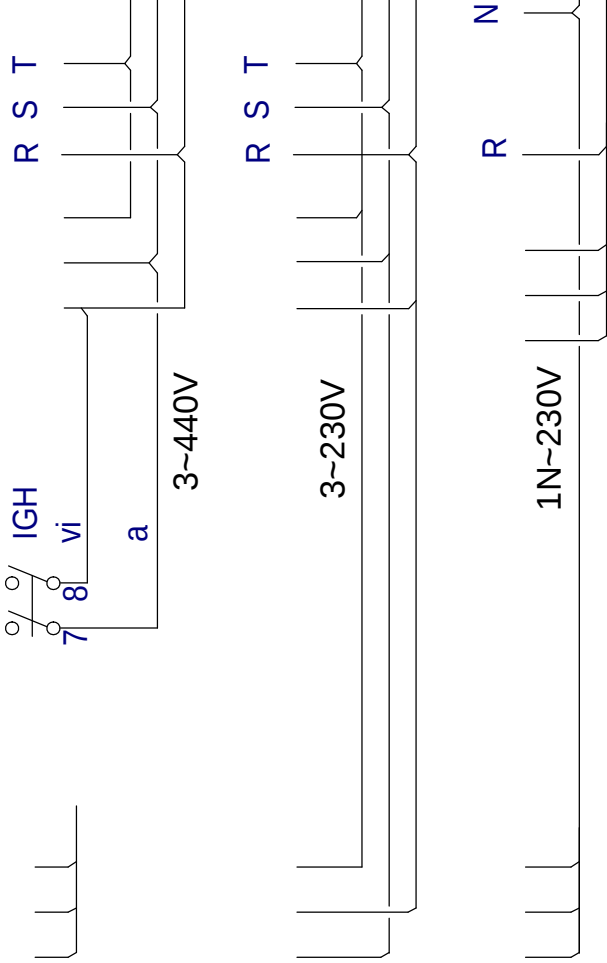

HPx :Lampara Calentamiento Placas / Heating lamp (electrical plates)

IGx :Conmutadores de placas electricas / Main switch (electrical plates)

IGH :Conmutador General Horno / Oven main switch

HH : Lampara Horno Encendido / Main lamp (oven)

HC : Lampara Calentamiento Horno / Heating lamp (oven)

Ri : Resistencia Horno Inferior / Lower resistance (oven)

Rs : Resistencia Horno Superior / Top resistance (oven)

RPx :Placas electricas / Electrical plates


BH : Termostato de Horno / Thermostat (oven)

TFR:Transformador / Transformer

K: Contactor / Contactor

VE: Ventilador / Fan

- r = rojo-red-rouge
m = marron-brown-marron
g = gris-grey-gris
n = negro-black-noir
a = azul-blue-bleu
b = blanco-white-blanc
vi = violeta-violette-violet
am = amarillo-yellow-jaune
na = naranja-orange-orange
rs = rosa-rose-pink
ve = verde-green-vert
am/ve = amarillo/verde-
yellow/green-jaune/vert

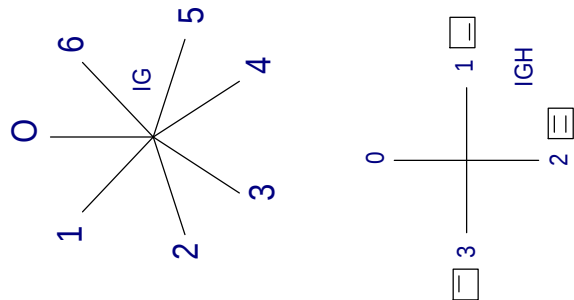

IG POS.	P1		P2		P3	
	1	2	3	4	5	
0						
1	X			X		X
2			X		X	X
3		X		X		X
4			X		X	X
5		X		X		X
6	X	X		X		X

IGH POS.	1_1a		2_2a		3_3a		4_4a		5_5a		6_6a		7_7a		8_8a	
	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
0																
1		X				X		X		X				X		X
2		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
3		X		X		X		X		X		X		X		X

12220953