



PRODUCT DOCUMENT PACK

Prepared and distributed by KW Commercial Kitchen

PRODUCT

Bromic 3735304-NR CF0500FTFG-NR Display Chest Freezer – 491L Glass Lid | Retail Ready

Model / SKU: 3735304-NR

KW COMMERCIAL KITCHEN

7/72 Canterbury Road, Bankstown NSW 2200

Phone 1300 001 366

Email sales@kwcommercial.com.au

Web www.kwcommercial.com.au



Scan for the current KW product page

DOCUMENT NOTICE

The supplier document begins on the next page. KW contact branding is added in a separate footer area and does not replace the supplier's instructions, specifications or warranty terms.

Official supplier source: </media/products/17584/documents/manual-2.pdf>

INSTRUCTION MANUAL CHEST FREEZER

3735262-NR, 3735301-NR, 3735302-NR, 3735303-NR, 3735304-NR,
3735305-NR, 3735306-NR, 3735307-NR, 3735308-NR, 3735309-NR,
3735310-NR, 3735312-NR, 3736203-NR, 3736204-NR



CONTENTS

1. PREFIX	4
2. IMPORTANT NOTES & WARNINGS	5
3. PRODUCT OVERVIEW	7
4. INSTALLATION	11
5. OPERATION	12
6. PRODUCT LOADING AND STORAGE	14
7. MAINTENANCE	14
8. TROUBLESHOOTING	15
9. ENVIRONMENTAL & DISPOSAL NOTES	16
10. WARRANTY	17

Note: Bromic Refrigeration reserves the right to make changes to specifications, parts, components and equipment without prior notification.
This Installation, operation and service manual may not be reproduced in any form with prior written consent from Bromic Refrigeration.

1. PREFIX

This manual contains important information about the installation, operation, and maintenance of Bromic chest freezers. Please pay close attention to the important safety information shown throughout this instruction manual. Any safety information will be accompanied by the following safety alert symbols:

 DANGER,  WARNING,  IMPORTANT

- READ THIS MANUAL CAREFULLY before installing or servicing this product.
- Improper installation, operation, or maintenance can result in death, severe injury, or property damage.
- Improper installation, operation, or maintenance may also result in warranty being voided.
- This appliance is intended for 220-240 Volt power supply.
- Installation and maintenance MUST be carried out as per instruction, in accordance with local regulation.
- Bromic will not accept liabilities, should the instructions incorporated in this manual be ignored.

2. IMPORTANT NOTES AND WARNINGS

- Read all instructions before installing or using this appliance.
- Retain this manual for future reference.
- Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury.
- Improper installation, adjustment or alteration and failure to follow the warnings and instructions in this manual could result in severe personal injury, death or property damage.
- The manufacturer is not responsible for any damage that could happen from improper use. The manufacturer emphasises that this appliance should be used in a responsible manner and that all procedures, warnings, and safety instructions contained in this booklet be followed strictly.
- Check for damage to the appliance regularly. If damage to the appliance is suspected, discontinue use immediately and contact the supplier or qualified person to repair.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible of their safety.
- Keep packaging material out reach of children.
- Children should be carefully supervised to ensure that they do not play with the appliance.
- Do not attempt to alter the appliance in any manner.
- Please pay attention to the maximum load limit when filling the baskets.
- All work on electrical equipment must be carried out by a qualified and licensed technician only.
- Do not perform maintenance until the appliance has been turned off and power disconnected.
- Never detach any cover except where specifically instructed in this manual. Doing so might expose live electrical parts.
- Do not operate the appliance with panels, covers or guards removed.
- Keep the air intake and outlets free of obstructions.
- Do not use the appliance outdoors.
- If the supply cord becomes damaged, it must be replaced by an authorised service agent or similarly qualified person in order to avoid a hazard.
- If the appliance has not been used, or will not be used for a long period of time, disconnect power supply.
- Electrical equipment should not be placed under the unit or where refrigerant could gather in the event of a leak.
- Always use original spare parts supplied by the manufacturer
- When contacting Bromic Customer Service, ensure that you have the Model, Serial Number available. The information can be found from the rating plate which is located outside the appliance.
- Unplug the appliance before cleaning or moving it to avoid electric shock.
- Never use steam cleaner or wet cloths to clean the control panel, lighting and vent grills. This may damage the appliance or cause electric shock.
- The power plug must be accessible at all times while the appliance is running.
- The power supply must be properly earthed, consult a qualified electrician if unsure.
- Do not use extension cord or power adapter with this appliance.
- Do not use this appliance in an area with high humidity or subject to water damage



**Warning: Risk of fire /
Flammable materials**

- **WARNING:** The refrigerant used in this appliance is flammable, use caution during handling, servicing and disposal of the appliance.
- **WARNING:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING:** Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Ensure that the tubing of the refrigerant circuit is not damaged during transportation and installation, consult Authorised Personnel is unsure
- **WARNING:** If the refrigeration circuit becomes damaged. Avoid open flames and other source of ignition. Immediately disconnect the appliance from power supply. Ventilate the room and call Service Hotline.
- **WARNING:** Leaking refrigerant may cause eye injuries or could ignite.
- **WARNING:** The room for installing the appliance must be at least 1m³ per 8g of refrigerant. The amount of refrigerant in the appliance can be found on the rating plate attached to the appliance.
- **WARNING:** Do not use electrical appliances inside the food/ice storage compartments unless they are of the type recommended by the manufacturer.
- **WARNING:** In order to reduce flammability hazards, all service work of this appliance must only be carried out by an Authorised Service Person. In Queensland, the Authorised Service Person must hold a Gas Work Authorisation to service appliances containing Hydrocarbon refrigerant including removal of covers.

3. PRODUCT OVERVIEW

		GD0007S-NR	CF0200ATCG-NR	CF0300ATCG-NR	CF0400ATCG-NR
Part Number		3735262-NR	3735301-NR	3735302-NR	3735303-NR
External Dimension	Height, mm	1296	949	949	949
	Width, mm	1298	719	1010	1298
	Depth, mm	615	615	615	615
Capacity	Litres	352	176	264	352
Gross Weight	Kg	146	57	70	81
Temp. Range	Degree Celsius	-22 to -12°C	-22 to -12°C	-22 to -12°C	-22 to -12°C
Climate Class*	Class	4	4	4	4
Max Ambient	Temperature	35	35	35	35
Lid Type	Type	Slide	Slide	Slide	Slide
Lid Shape	Type	Flat	Curved	Curved	Curved
Safety Glass Lid	Type	Yes	Yes	Yes	Yes
Stainless Steel Lid	Type	NA	NA	NA	NA
Basket	Qty	7	2	4	5
Lockable Front Castor		Yes	Yes	Yes	Yes
Refrigeration	Refrigerant	R290	R600a	R290	R290
	Charge, g	110	65	105	110
Plug	Rating	10A	10A	10A	10A
Extra Care Warranty	Years	5	5	5	5

* Climate class 3 refers to 25°C dry bulb temperature, 60% relative humidity; Climate class 4 refers to 30°C dry bulb temperature, 55% relative humidity;

		CF0500ATCG-NR	CF0600ATCG-NR	CF0200FTFG-NR	CF0300FTFG-NR
Part Number		3736203-NR	3736204-NR	3735308-NR	3735309-NR
External Dimension	Height, mm	949	949	892	892
	Width, mm	1548	1750	719	1010
	Depth, mm	615	615	629	629
Capacity	Litres	427	555	191	296
Gross Weight	Kg	96	114	58	72
Temp. Range	Degree Celsius	-22 to -12°C	-22 to -12°C	-22 to -12°C	-22 to -12°C
Climate Class*	Class	4	4	4	4
Max Ambient	Temperature	35	35	35	35
Lid Type	Type	Slide	Slide	Slide	Slide
Lid Shape	Type	Curved	Curved	Flat	Flat
Safety Glass Lid	Type	Yes	Yes	Yes	Yes
Stainless Steel Lid	Type	NA	NA	NA	NA
Basket	Qty	6	6	2	4
Lockable Front Castor		Yes	Yes	Yes	Yes
Refrigeration	Refrigerant	R290	R290	R600a	R290
	Charge, g	110	105	55	85
Plug	Rating	10A	10A	10A	10A
Extra Care Warranty	Years	5	5	5	5

* Climate class 3 refers to 25°C dry bulb temperature, 60% relative humidity; Climate class 4 refers to 30°C dry bulb temperature, 55% relative humidity;

		CF0400FTFG-NR	CF0500FTFG-NR	CF0700FTFG-NR	CF0300FTSS-NR
Part Number		3735310-NR	3735304-NR	3735305-NR	3735312-NR
External Dimension	Height, mm	892	892	892	903
	Width, mm	1298	1548	2055	1012
	Depth, mm	629	629	629	715
Capacity	Litres	401	491	670	296
Gross Weight	Kg	80	83	120	65
Temp. Range	Degree Celsius	-22 to -12°C	-22 to -12°C	-22 to -12°C	-25 to -15°C
Climate Class*	Class	4	4	4	4
Max Ambient	Temperature	35	35	35	35
Lid Type	Type	Slide	Slide	Slide	Hinged
Lid Shape	Type	Flat	Flat	Flat	Flat
Safety Glass Lid	Type	Yes	Yes	Yes	NA
Stainless Steel Lid	Type	NA	NA	NA	Yes
Basket	Qty	5	6	8	1
Lockable Front Castor		Yes	Yes	Yes	Yes
Refrigeration	Refrigerant	R290	R290	R290	R600a
	Charge, g	105	110	115	48
Plug	Rating	10A	10A	10A	10A
Extra Care Warranty	Years	5	5	5	5

* Climate class 3 refers to 25°C dry bulb temperature, 60% relative humidity; Climate class 4 refers to 30°C dry bulb temperature, 55% relative humidity;

		CF0500FTSS-NR	CF0700FTSS-NR
Part Number		3735307-NR	3735306-NR
External Dimension	Height, mm	903	903
	Width, mm	1552	2055
	Depth, mm	715	715
Capacity	Litres	492	675
Gross Weight	Kg	94	118
Temp. Range	Degree Celsius	-25 to -15°C	-25 to -15°C
Climate Class*	Class	4	4
Max Ambient	Temperature	35	35
Lid Type	Type	Hinged	Hinged
Lid Shape	Type	Flat	Flat
Safety Glass Lid	Type	NA	NA
Stainless Steel Lid	Type	Yes	Yes
Basket	Qty	2	3
Lockable Front Castor		Yes	Yes
Refrigeration	Refrigerant	R290	R290
	Charge, g	110	110
Plug	Rating	10A	10A
Extra Care Warranty	Years	5	5


* Climate class 3 refers to 25°C dry bulb temperature, 60% relative humidity; Climate class 4 refers to 30°C dry bulb temperature, 55% relative humidity;

4. INSTALLATION

Locating the Cabinet

Ensure the following instructions are observed as this is vital for proper and trouble-free operation.

- Do not install the cabinet outdoors.
- Locate the appliance in a dry and well ventilated place.
- The unit must be positioned on a level surface.
- Do not install in the vicinity of heating radiators or other heat sources.
- Do not install the appliance where it is exposed to direct sunlight.
- Do not install the appliance where it is exposed to warm draughts or open doors.
- Keep the ventilation grill free of obstructions.
- Adequate allowance should be made for door openings.

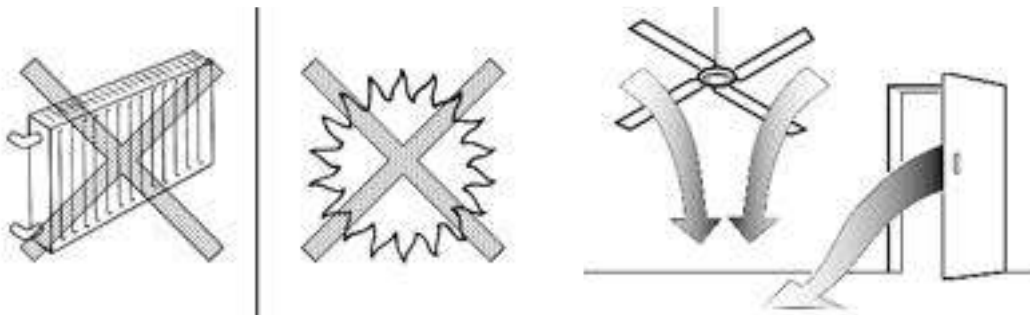


Ventilation

- Allow 150mm clearance between walls, ceiling and the appliance. This is essential for optimal performance and reliability

Power Supply

- The appliance must not be plugged into a multiple outlet power board.
- The appliance is supplied with a flexible power cord fitted with a 3-pin plug.
- The socket used must be properly earthed and fuse/RCD protected.
- See the rating label inside the cabinet for supply voltage, frequency and current draw.
- Power cable should not be placed next to heat source such as room heater or other electrical appliance.
- Do not turn off power before consulting the person responsible.
- Mark the power source clearly, so the refrigerator is not unplugged or turned off accidentally.

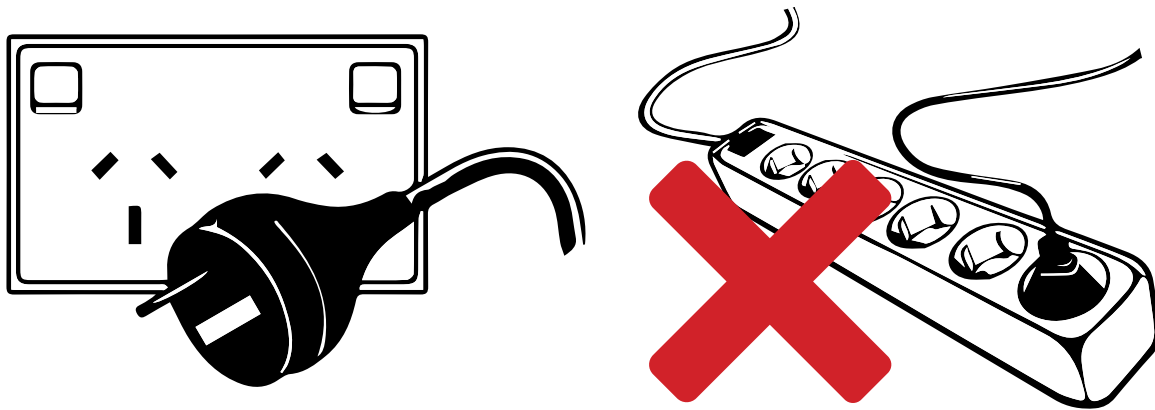

Before Operating

- Avoid tilting or transporting the appliance in a horizontal position. If the appliance were to be tilted, it must be left to stand in an upright position and not plugged in for at least 6 hours.
- Remove all the packaging material before using the appliance.
- Start the appliance only if it has been installed as described.

5. OPERATION

Start-up


- Connect the appliance to the mains power supply, the appliance will start working without requiring further operation.
- The thermostat has been pre-set by factory, there is no need to adjust unless requiring different internal temperature.

Using the controller

- For solid lid models (as per below picture), adjust the thermostat using the dial below to set the appliance's internal temperature, moving clock-wise to achieve lower internal temperature. You should only make small adjustment and wait 24 hours to see whether further adjustment is required.



- The orange switch (on selective models) is used to activate Fast Freezing mode. It can be used for first time operation, or when fast freezing is required. Turn the Fast Freezing switch off within 24 hours.
- The green indicator (on selective models) indicates valid power supply.
- The red indicator (on selective models) indicates an alarm condition when internal temperature of the appliance is higher than normal. This can happen when the lid is left open or warm products are loaded. The alarm indicator will automatically turn off once above condition resolved, depending on the situation, this can take up to 24 hours.
- For glass lid models, the thermostat can be accessed by removing two screws from the base of the ventilated service panel on the left hand side of the unit. **THE UNIT MUST BE TURNED OFF PRIOR TO REMOVING THIS PANEL.** The unit can have the internal temperature lowered by turning the dial clockwise. **NOTE:** You should only make small adjustment and wait 24 hours to see whether further adjustment is required.

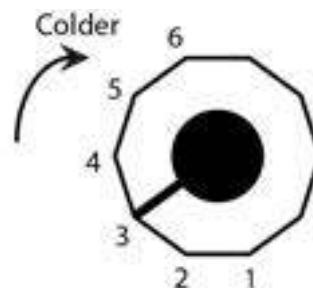

Digital thermometer

- The digital thermometer measures and displays the internal temperature. The battery should be replaced when the brightness of the LCD display appears to be weak or dim. To change the batteries access the rear of the temperature display by removing two screws from the base of the ventilated service panel on the left hand side of the unit. **THE UNIT MUST BE TURNED OFF PRIOR TO REMOVING THIS PANEL.** The battery compartment is then on the back of the temperature display and can be opened by sliding the cover to the left, replace with LR44 type batteries.



6. PRODUCT LOADING AND STORAGE



IMPORTANT: Run the refrigerator for at least 24 hours before loading.



WARNING: Do not store explosive substances such as aerosol cans with a flammable propellant inside the appliance.

Start-up

- Clean the interior surface with a soft cloth and warm water before loading.
- Ensure there is free circulation of air between the products.
- Do not overstock the appliance.
- Keep refrigerator lid openings to a minimum.
- Maximum recommended shelf load (for each basket) is specified in section 3 of this manual. Do not overstock.

NOTE: Bromic cannot be responsible for loss of stock or damage to stock.

7. MAINTENANCE



WARNING: Disconnect the appliance from the power supply before performing any maintenance. Never unplug the appliance by pulling on the cord. Always grasp the plug firmly and pull straight out of the outlet.



WARNING: Exposure to significant water ingress will void warranty and cause potential safety issues. If the unit should be exposed to water, please contact the manufacturer immediately.

IMPORTANT: Warranty may be void if there is no evidence of preventative maintenance is performed on the appliance.

Cleaning the Cabinet

- Remove the products and transfer to a suitable location prior to cleaning the inside of the cabinet.
- Do not use any aggressive or abrasive cleaning agents.
- Never use a water hose or a high-pressure jet to clean.
- Do not use sharp or pointed objects for cleaning.
- Clean the inside and outside of the appliance with a clean damp cloth or with a neutral cleanser.
- Dry all surfaces with a dry cloth.

Defrosting

- The freezer should be defrosted when ice is approximately 5mm thick. A thick layer of ice built-up may reduce the freezer's cooling capacity and increase energy consumption.
- To ensure correct operation of the appliance, we recommend to defrost at least twice a year
- Follow below procedure to defrost
 1. Plan your defrosting in advance, preferably when there is no or limited stock in the freezer
 2. 4 hours before defrosting, activate Fast Freezing mode (refer to section 5 of this manual) to further freeze the food stock, getting them ready for temporary relocation.
 3. Disconnect the appliance from power supply.

4. Remove all frozen food and store them temporarily in another freezer or insulated container.
5. Remove all baskets, leave the lid fully open, the defrost is now in progress until there is no ice left inside the appliance. You can use the included ice scraper to remove the ice.
6. Never use electric heater, warm water or hairdryers for defrosting.
7. Locate the external drain plug, put a container with at least 1 litre capacity underneath the drain ready to collect defrosted water.
8. Pull out half way the external drain plug, rotate it until the water hole points downward to the container.
9. Pull out the internal drain plug to start drain defrosted water.
10. Once all water is drained, reattach both the internal and external drain plugs with the drain hole facing up.
11. Clean the internal with dry cloths.
12. Plug the appliance back in to resume normal working condition.

Replace battery of the digital thermometer

The battery of the digital thermometer should be replaced when the brightness of the LCD display appears to be weak or dim. Remove the thermometer gently using a flat head screw driver, remove the drained batteries located at the back of the thermometer and replace them with new LR44 type batteries.

8. TROUBLESHOOTING



IMPORTANT: Repairs on the unit must be carried out by an authorised and licensed person only. Contact the manufacturer or an approved service agent for any repairs needed.

Symptom	Possible Cause(s)	Solution
Unit does not work	A. No power supply	A. Check power supply and green indicator B. Adjust temperature control dial to a colder position
Internal Temperature Too High	A. Ambient temperature too high B. Inadequate ventilation C. Wall clearances below minimum distance D. Incorrect dial position E. Ice build-up on internal walls	A. Relocate unit B. Keep ventilation slots free C. Adjust to minimum clearance D. Adjust temperature control dial E. Defrost the appliance (refer to section 7)
Internal Temperature Too Low	A. Set temperature too low	A. Adjust temperature control dial
Odour inside cabinet	A. Cabinet dirty	A. Clean
Lid difficult to open	A. Normal B. Hinge damage	A. It is normal for the lid to be difficult to open just after you closed it B. Inspect hinge and call service hotline
Noisy	A. Unlevel surface	A. Relocate unit
Thermometer LCD dim / off	A. Battery dead	A. Replace battery

9. ENVIRONMENTAL AND DISPOSAL NOTES

These refrigerated cabinets are designed to high standards of environmental protection and recycling convenience. Cyclopentane, an environmentally friendly foaming agent, has been used. Cyclopentane is distinguished by zero ozone depletion potential (ODP) and zero global warming potential (GWP). The refrigerant used and contained within a hermetically tight circuit is environmentally friendly and does not contain chlorine and zero ODP.

The device must be disposed of in accordance with applicable regulations. The WEEE regulations must be observed.

In the interest of preventing environmental nuisance and promoting re-use of the high quality materials employed, used refrigeration equipment must be collected for expert disposal and recycling. Therefore, observe the following disposal regulations:

- The cabinet must not be discarded with regular waste.
- The refrigeration circuit must not be damaged.
- Before disposal, make it unserviceable by disconnecting the power plug and cutting off the power cable.
- Consult your local authorities or authorised dealers for details of collection and disposal facilities.
- Children are often unable to recognise the dangers associated with refrigeration equipment. Proper supervision must be maintained and children must be prevented from playing with discarded refrigerated cabinets.
- The refrigerant used in this appliance is flammable. The refrigeration circuit must not be damaged.



**Warning: Risk of fire /
Flammable materials**

10. WARRANTY




All Bromic products are manufactured to the highest quality standard and are supported by our Extra Care Service Warranty, including guarantees against any material or workmanship defects; guarantees that cannot be excluded under Australian Consumer Law.

Warranty Terms vary across the range. Please ensure you are familiar with the Terms and Conditions that apply to the purchase of your Bromic product by referring to the Warranty Policy included with your purchased product.


Alternatively, you can also download the Warranty Policy at www.bromicgroup.com/warranty-information

HOW TO PLACE A SERVICE REQUEST

- Please call 1300 276 642 to place a warranty service request and let the operator know whether you need Priority A or B service. More information can be found below.
- Ensure you have the serial number of your product ready before contacting us.
- The serial number of your product can be found on a compliance plate located on the inside right and at the rear of your cabinet.

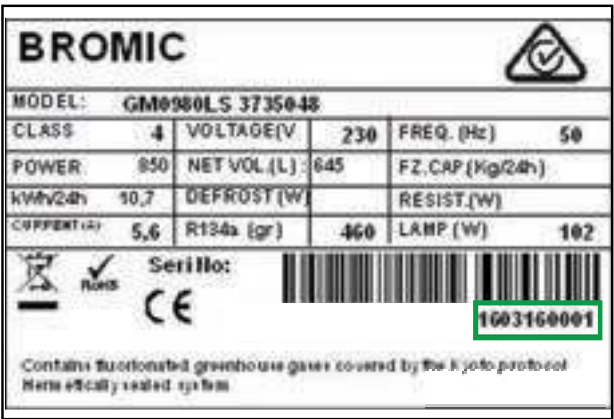

Compliance Plate Example 1

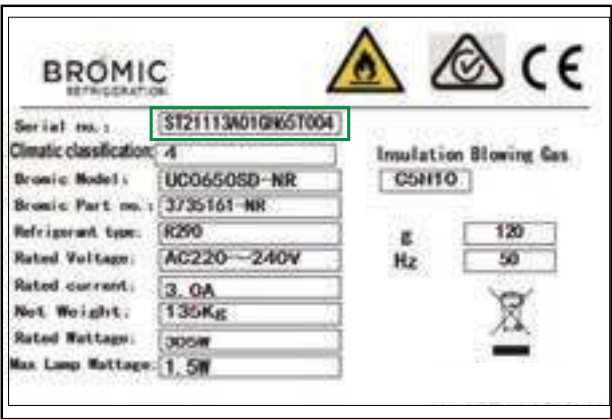

SERVICE REQUEST PRIORITY



PRIORITY A SERVICE

When the unit is **NOT** performing its primary function such as cooling or heating, or presents an OH&S or food safety risk



PRIORITY B SERVICE

When the unit is performing its primary function, and presents no OH&S or food safety risk. i.e. lights, gaskets. locks, door adjustment



SERVICE CALL PLACED **BEFORE** MIDDAY

Priority A - Technician to attend site within 4 hours
Priority B - Technician to attend site within 8 business hours



SERVICE CALL PLACED **AFTER** MIDDAY

Priority A - Technician attends site before midday on the following business day
Priority B - Technician attends site before 4pm on the following business day



BROMIC REFRIGERATION

10 Phiney Place, Ingleburn (Sydney)
NSW 2565 Australia
T. 1300 276 642

For further product information
bromicrefrigeration.com.au